


alcatel

# PIXI 4

7" WiFi Android

## KRATKO UPUTSTVO ZA UPOTREBU


Prednja  
kamera

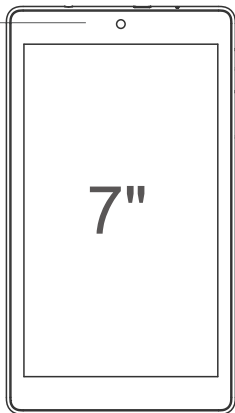

Taster za  
uključivanje


Jačina zvuka  
gore/dole

1

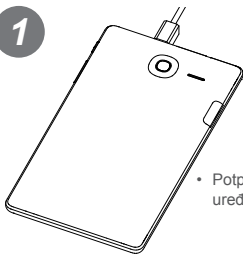



- Potpuno napunite svoj uređaj pre prve upotrebe.

2

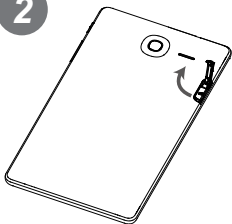

- Otvorite masku.

3

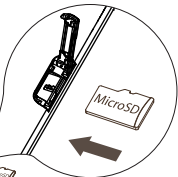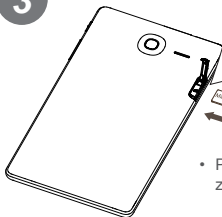

- Postavite MicroSD karticu, zatim vratite masku.