


alcatel

# PIXI4

7" 4G Android


## QUICK START GUIDE

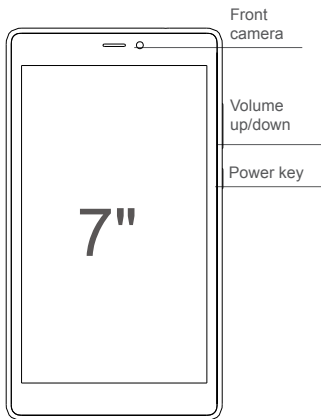

9015J


CJB1FDCALAAA

1

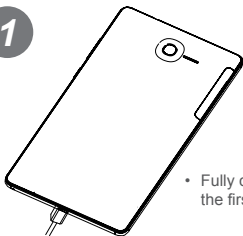

- Fully charge your device for the first time use.

2

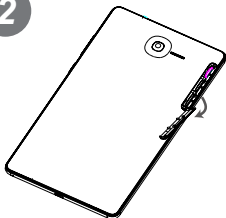

- Open the cover.

3



- Insert the MicroSD card and **SIM card**, then close the cover.

# 1 Home screen

You can move all of the items (applications, shortcuts, folders and widgets) you use most frequently to your Home screen for quick access. Touch the **Home** key to switch to the Home screen.



## Status bar

- Status/Notification indicators
- Touch and drag down to open the notification panel.

## Search bar

- Touch ① to enter text search screen.
- Touch ② to enter voice search screen.

Touch an icon to open an application, folder, etc.

## Favourite tray applications

- Touch to enter the application.
- Long press to move or change applications.

Touch to enter application list.

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view.

## 1.1 Status bar

From the status bar, you can see both tablet status (to the right side) and notification information (to the left side).

Touch and drag down the Status bar to open the Quick settings panel or Notification panel. Touch and drag up to close it. When there are notifications, you can touch them to access notifications directly Notification panel.

When there are notifications, touch and drag down the Status bar to open the Notification panel to read more detailed information.



Touch to **open** the Quick settings panel.

Touch to clear all event-based notifications (other ongoing notifications will remain).

### Quick settings panel

Touch and drag down the Notification **panel to** open the Quick settings panel. You can enable or disable functions or change modes by touching the icons.




Touch to enter user screen.

Touch to access **Settings**, where you can set more items.

# 2 Apps and widgets

## 2.1 Apps

The Apps list contains all pre-installed and new apps. To access the Apps list, touch the all apps key  from Home screen.

## 2.2 Widgets

By long pressing an empty area in the Home screen, you can switch to widget interface mode.

## 2.3 Get more apps

Touch the Google Play Store icon  to get more apps.



## 2.4 Manage shortcut on Home screen

When you long press an icon in the All apps or when in widget interface mode, it will jump to the Home screen automatically, where you can drag it to a preferred location. Overlapping icons together will build a folder. You can name the folder by touching Unnamed Folder.

## 2.5 Remove an app icon from Home screen

Long press an item to activate the Move mode, drag the item up to Remove, and release after the item turns red.

## 2.6 Uninstall apps

Touch  to enter All apps, then long press the app icon you want to uninstall, drag it over the Uninstall icon , which appears top-right on the Home screen.

**Note:** Only third-party apps can be uninstalled.

# 3 Basic operation

## 3.1 Power on your device

Long press the **Power** key until the tablet powers on. It will take a few seconds before the screen lights up.

## 3.2 Power off your device

Long press the **Power** key for about 3 seconds until the menu appears. Select **Power off** from the menu to power off your device.

## 3.3 Stand-by mode

Press the **Power** key once to shut down the screen and to enter the stand-by mode.

**Note:** When unused, the product will enter stand-by mode automatically. Press the **Power** key to wake it up.

## 3.4 Restart

Long press the **Power** key for about 3 seconds until the menu appears. Select **Restart** from the menu to restart your device.

Long press the **Power** key for about 10 seconds to restart your device.

## 3.5 Phone call

You can easily place a call using the Call app. Touch from the Home screen and select Call.

**Note:** During a call, the screen will turn off when your face touch it to avoid mis-operation.

## 3.6 Connecting to a computer via USB

After connecting your device to a computer by USB, you can transfer files between your device and the computer.

**Note:** Files copied to your tablet are not available until the USB data cable is disconnected from the PC completely. Use a USB 2.0 version or higher to connect the devices.

## 3.7 Change your wallpaper

You can change your wallpaper in two ways.

Long press the Home screen and select **WALLPAPERS**. Slide left and right to locate a desired image, and touch **Set wallpaper** to confirm.

Alternatively follow the path: **Settings > Display > Wallpaper**.

## 3.8 Wi-Fi

To turn Wi-Fi on and connect to a wireless network:

Touch Wi-Fi icon on the Quick settings panel to turn on/off Wi-Fi. Alternatively, select **Settings > Wi-Fi** and turn on/off the Wi-Fi switch.

Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (You may need to contact the network operator for details). When finished, touch **CONNECT**.



**Tip:** To extend the battery life, turn off Wi-Fi when you do not use it.

## 3.9 Gmail





As the Google's web-based email service, Gmail is configured when you first set up your tablet. Gmail on your tablet can be automatically synchronised with your Gmail account on the web. With this app, you can receive and send mails, manage mails by labels, and archive mails, etc.

### To open Gmail

From the Home screen, touch the **Gmail** icon in the Favourites tray.

Gmail displays messages and conversations from one single Gmail account at a time. If you own more than one account, you can add an account by touching the icon  and then  after your account name from the Inbox screen, then touch **Add account**. When finished, you can switch to another account by touching the name of the account you want to view.

### **To create and send emails**


- 1 Touch  from the Inbox screen.
- 2 Enter the recipient(s)'s email address in **To** field.
- 3 If necessary, touch the Cc/Bcc menu icon  to add a copy or a blind copy to the message.
- 4 Enter the subject and the content of the message.
- 5 Touch  icon and select **Attach file** to add an attachment.
- 6 Finally, touch the icon  to send.
- 7 If you do not want to send the mail out right away, you can touch the  icon and then **Save draft** or touch the **Back** key to save a copy. To view the draft, touch your account name to display all labels, then select **Drafts**.

## **3.10 Surf the web**

Use the Chrome app to surf the web easily and securely.

On the Home screen, touch  > Chrome to access this function.

### **To go to a web page**

On the Chrome screen, touch the URL box at the top, enter the address of the web page, then touch  on the keyboard to confirm.



# 4 Settings

## 4.1 Device

### 4.1.1 Gestures

Your device can be configured in Alarm mode so that turning it over will start the snooze function.

When the **Turn over to mute** feature is enabled, turn the tablet over to mute the incoming call.

When the **Double click screen** feature is enabled, double tapping on the screen will light it on.

### 4.1.2 Display

Touch **Settings > Display** to view the following:

<b>MiraVision™</b>	<b>MiraVision™ is a set of engines to enhance display picture quality.</b>
<b>Brightness level</b>	Adjust your screen to a comfortable brightness.
<b>Wallpaper</b>	Set your wallpaper.
<b>Sleep</b>	Set a time before the Screensaver begins.
<b>Daydream</b>	Select an animation effect to show in standby status.
<b>Font size</b>	Select a suitable font size for your tablet.
<b>When the device is rotated</b>	Set the device to rotate the contents of the screen or to stay in current orientation when it is rotated.

### 4.1.3 Sound & notification

You can set **Volumes** with the Volume up/down keys or by touching **Settings > Sound & notification**.

### 4.1.4 Apps

Touch **Setting > Apps** to check the App status.

### **4.1.5 Storage & USB**

Touch **Settings** > **Storage & USB** to view usage status regarding your internal storage and SD card.

### **4.1.6 Battery**

Touch **Settings** > **Battery** to check the battery power and its service status.

### **4.1.7 Memory**

Touch **Settings** > **Memory** to check the memory status.

### **4.1.8 Users**

Add a user or profile so that you can share the tablet with another person while protecting your privacy.

## **4.2 Personal**

### **4.2.1 Location**

You can use GPS or Wi-Fi network to determine your location.

### **4.2.2 Security**

Touch to set security settings.

### **4.2.3 Accounts**

Touch to add an email or social-network account and manage account settings, such as sync frequency and notifications.

### **4.2.4 Google**

Touch to set settings related to Google accounts and services.

### **4.2.5 Language & input**

Touch **Settings** > **Language & input** to view or set system language and input methods.

<b>Language</b>	Set the system language.
<b>Current Keyboard</b>	Check all the input methods installed in the tablet and select one.

## 4.2.6 Backup & reset

You can back up settings and other data associated with one or more of your Google accounts. If you need to replace or factory reset your device, you can restore your data for any accounts that were previously backed up.

Touch **Settings > Backup & reset**.

**Tips:** Make sure that all the important data have been backed up before you run factory data reset, as this function will erase all user installed apps and data. Ensure that the remaining battery power is over 50%.

## 4.3 System

### 4.3.1 Date & time

Touch **Settings > Date & time** to set date, time and format.

**Note:** When the Automatic option is deactivated, you can manually set the date and time.

### 4.3.2 Scheduled power on & off

Touch to make your tablet power on or off in a scheduled manner.

### 4.3.3 Accessibility

Get access to auxiliary functions of your device.

### 4.3.4 Printing

Turn to use the **Cloud Print** function.

### 4.3.5 Regulatory & Safety

Touch to view **Regulatory & Safety** information, such as Product model, Manufacturer name, etc.

### 4.3.6 About tablet

Touch **Settings > About tablet** to check legal information, tablet status and software version, etc.